

Datron GmbH

JC-46

VINOTECA
WINE CELLAR
CAVE A VIN


Fully integrated single zone wine cellar
Voltage: 220~240V,50Hz
Gross weight: 21 kg
Dimensions: 460x515x530mm
Colour: Black

CE

Datron GmbH

INSTRUCTION MANUAL

JC-46
Beverage Cooler

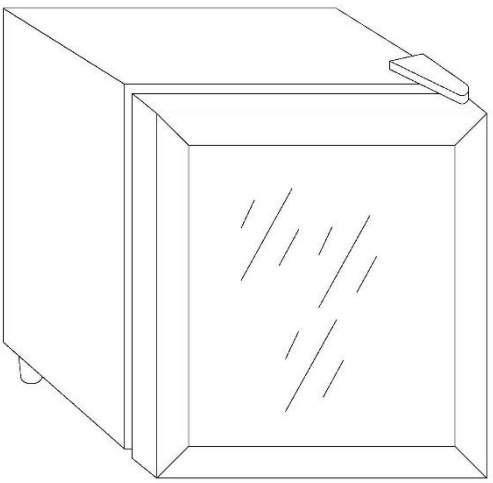

Read all these instructions carefully before use and save them. We reserve the right to make technical and optical changes without prior notice. Pictures and accessories / functions may vary depending on model. Some accessories / functions are optional. The use of attachments or accessories which are not supplied with the appliance is not recommended. This could result in electrical shock or injury or permanent damage to the appliance. This product is for household use only

CE

BEVERAGE CENTER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual for your appliance. Always read and obey all safety messages.



This is the Safety Alert Symbol. This symbol alerts you to potential hazards that can kill or injure you and others. All safety messages will follow the Safety Alert Symbol and either the words “DANGER”, “WARNING” or “CAUTION”.

DANGER

Danger means that failure to heed this safety statement may result in severe personal injury or death.

WARNING

Warning means that failure to heed this safety statement may result in extensive product damage, serious personal injury, or death.

CAUTION

Caution means that failure to heed this safety statement may result in minor or moderate personal injury, property or equipment damage.

All safety messages will alert you to know what the potential hazard is, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

IMPORTANT SAFEGUIDES



Before the Beverage Center is used, it must be properly positioned and installed as described in this manual, so read the manual carefully. To reduce the risk of fire, electrical shock or injury when using the Beverage Center, follow basic precautions, including the following:

DANGER


- Plug into a grounded 3-prong outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- It is recommended that a separate circuit, serving only your Beverage Center be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean Beverage Center parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the Beverage Center or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your Beverage Center unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.


⚠ WARNING ⚠

FOLLOW WARNING CALL OUTS BELOW ONLY WHEN APPLICABLE TO YOUR MODEL

- Use two or more people to move and install Beverage Center. Failure to do so can result in back or other injury.
- To ensure proper ventilation for your Beverage Center, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 60°F (16˚C) and below 90°F (32°C). This unit must be installed in an area protected from the elements, such as wind, rain, water spray or drips.
- The Beverage Center should not be located next to ovens, grills or other sources of high heat.
- The Beverage Center must be installed with all electrical, water and drain connections in accordance with state and local codes. A standard electrical supply (120 V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances is required.
- Do not kink or pinch the power supply cord of Beverage Center.
- The fuse (or circuit breaker) size should be 15 amperes.
- It is important for the Beverage Center to be leveled in order to work properly. You may need to make several adjustments to level it.
- All installation must be in accordance with local plumbing code requirements.
- Make certain that the pipes are not pinched or kinked or damaged during installation.
- Check for leaks after connection.
- Never allow children to operate, play with or crawl inside the Beverage Center.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Do not use this apparatus for other than its intended purpose.
- This appliance is not intended for use of persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

PARTS & FEATURES

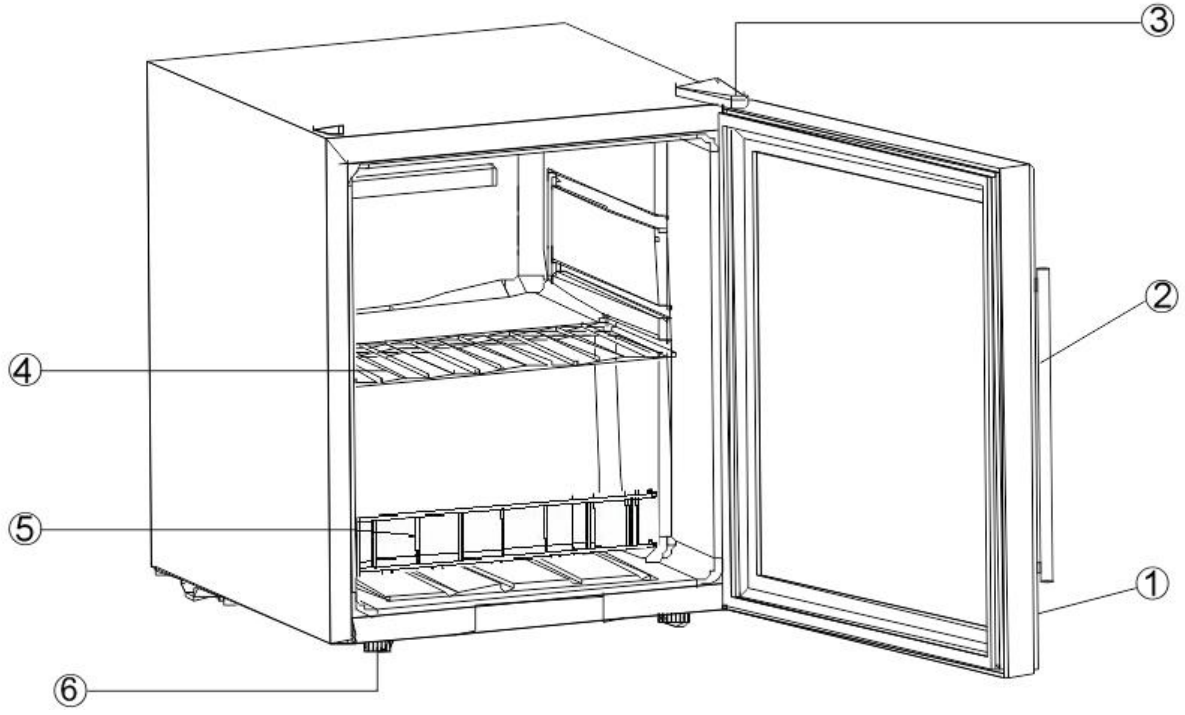

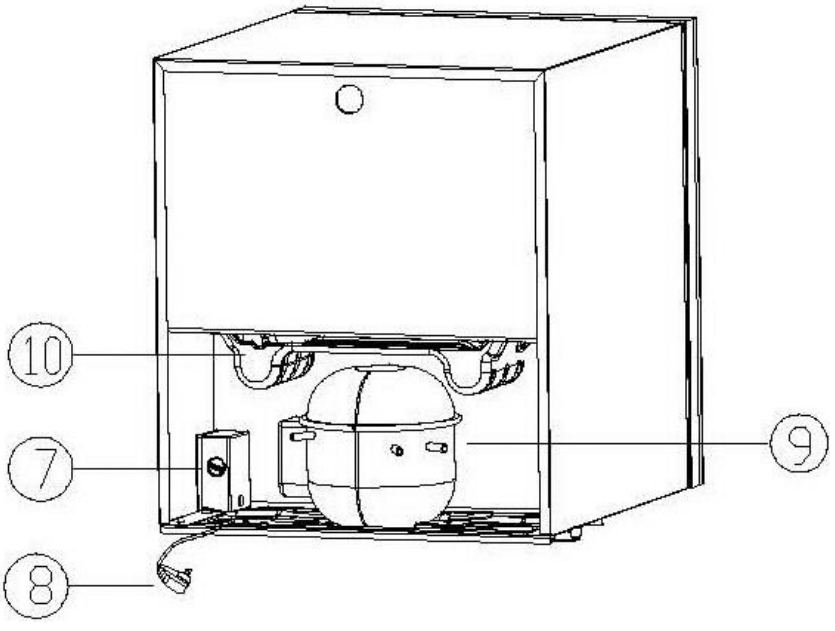

1	Glass Door	6	Levelling Leg
2	Recessed Handle	7	Temperature Control
3	Door Hinge (Reversible)	8	Power Cord
4	2 wooden Shelf	9	Compressor
5	Guard bar	10	Water Box

⚡WARNING⚡	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the Beverage Center.
- **DANGER or WARNING:** Risk of child entrapment.
  Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous . . . even if they will "just sit in the garage a few days".
- **Before you throw away your old Beverage Center:** Take off the door. Leave the shelves in place so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Do not repair or replace any part of the Beverage Center or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions. Replace the fuse with the same type.

-Save these instructions-

INSTALLATION INSTRUCTIONS

➢ **Before Using Your Beverage Center**

- Remove the exterior and interior packing.
- Check to be sure you have all of the following parts:
  - 2 Shelves (1 Large / 1 small)
  - 1 Instruction Manual
- Clean the interior surface with lukewarm water using a soft cloth.

➢ **Installation of Your Beverage Center**

- This Beverage Center is designed to be free standing installation only, and should not be recessed or built-in (Fully recessed).
- Place your Beverage Center on a surface that is strong enough to support it when it is fully loaded.
- Allow 5 inches of space between the back and sides of the Beverage Center, which allows the proper air circulation to cool the heat sink.
- Locate the Beverage Center away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- This Beverage Center uses compressor refrigeration technology and is not designed for storage in hot areas like garages, warehouses or outdoors since it is designed to operate at a maximum of 30 degrees below the ambient temperature.
- Avoid locating the unit in moist areas.
- Plug the Beverage Center into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center.
- After plugging the Beverage Center into a wall outlet, allow the unit to cool down for 2-3 hours before placing any items in the compartment.

-

➢ **Electrical Connection**

> **Warning**
> Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized service center.

This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.

Do not under any circumstances cut or remove the third ground prong from the power cord supplied. For personal safety, this appliance must be properly grounded.

This appliance requires a standard 120 Volt AC / 60Hz electrical ground outlet with three-prong. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. When a standard 2-prong wall outlet is encountered, it is your responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury.


The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the appliance. This provides the best performance and also prevent overloading house wiring circuits that could cause a fire hazard from overheated. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

➢ **Extension Cord**

Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 120 volts and at least 10 amperes.

OPERATING YOUR BEVERAGE CENTER

➢ **Setting the Temperature Control**

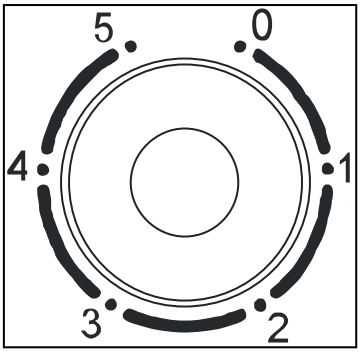

- To control the internal temperature, adjust the control dial according to the ambient temperature or purpose of use.
- The first time you turn the unit on, set the temperature control to “5” (coldest setting).
- The temperature range to control is 4℃~18℃, and the relative setting position is from “5” to “0”. After 24 to 48 hours, adjust the temperature control to the setting that best suites your needs. The setting of “3” should be correct for home or office Beverage center use.

NOTE:

- If the unit is unplugged, has lost power, or turned off; you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the Beverage center will not start.

CARE AND MAINTENANCE

➢ **Defrosting Your Beverage Center**

Defrost the Beverage center when the frost accumulated on the evaporator is about 5mm (1/5 inch) thick. Set the thermostat dial to “0” position. Defrosting usually takes a few hours. After defrosting, return the thermostat dial to the desired position. To defrost quickly remove Wines from the Beverage center and leave the door open. Never use a knife or other metal instrument to scrape ice/frost from the evaporator.

➢ **Cleaning Your Beverage Center**

- Turn the temperature control to "0", unplug the Beverage center, and remove the wine and shelves.
- Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the shelves with a mild detergent solution.
- The outside of the Beverage center should be cleaned with mild detergent and warm water.
- Wring excess water out of the sponge or cloth before cleaning the area of the controls, or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

➢ **Vacation Time**

- **Short vacations:** Leave the Beverage center operating during vacations of less than three weeks.
- **Long vacations:** If the appliance will not be used for several months, remove all items and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

- **Moving Your Beverage Center**

- Remove all bottles.
- Securely tape down all loose items (shelves) inside your appliance.
- Tape the door shut.
- Protect outside of appliance with a blanket, or similar item.

- **Energy Saving Tips**

- The Beverage Center should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.
- Overloading the Beverage Center forces the compressor to run longer.


PROBLEMS WITH YOUR BEVERAGE CENTER?

You can solve many common Beverage Center problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the service.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Beverage Center does not operate.	Not plugged in. The circuit breaker tripped or a blown fuse.
Turns on and off frequently.	The room temperature is hotter than normal. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The Beverage Center does not have the correct clearances.
Vibrations.	Check to assure that the Beverage Center is level.
The Beverage Center seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your Beverage Center. Contraction and expansion of the inside walls may cause popping and crackling noises. The Beverage Center is not level.
The door will not close properly.	The Beverage Center is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.


WIRING DIAGRAM

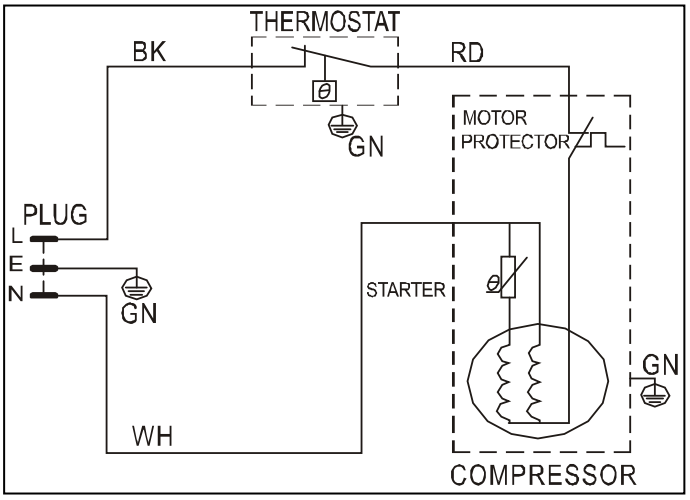


Note: We accept no liability for damage caused by incorrect usage or the ignoring of the regulations in this manual.

Disposal

Waste electrical products should not be disposed of with household waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances (WEEE). By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

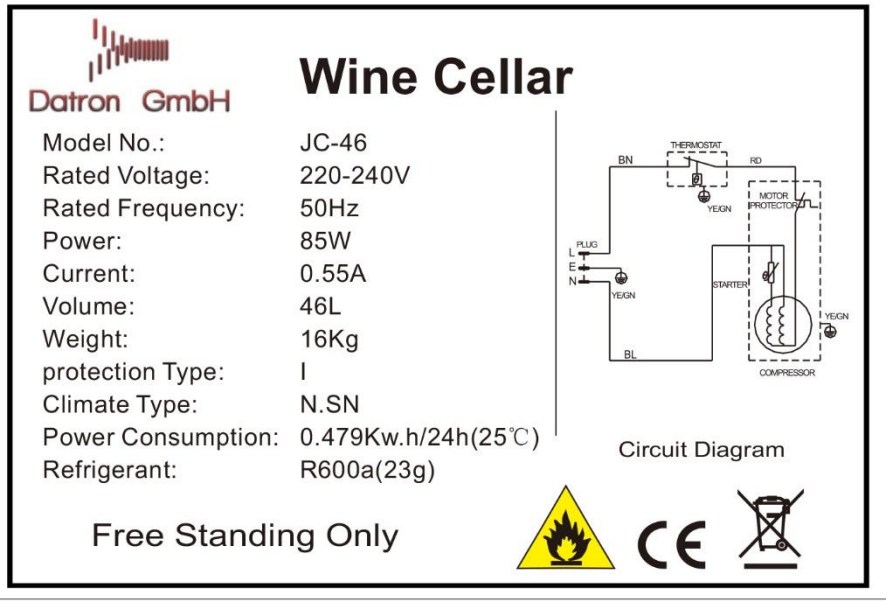

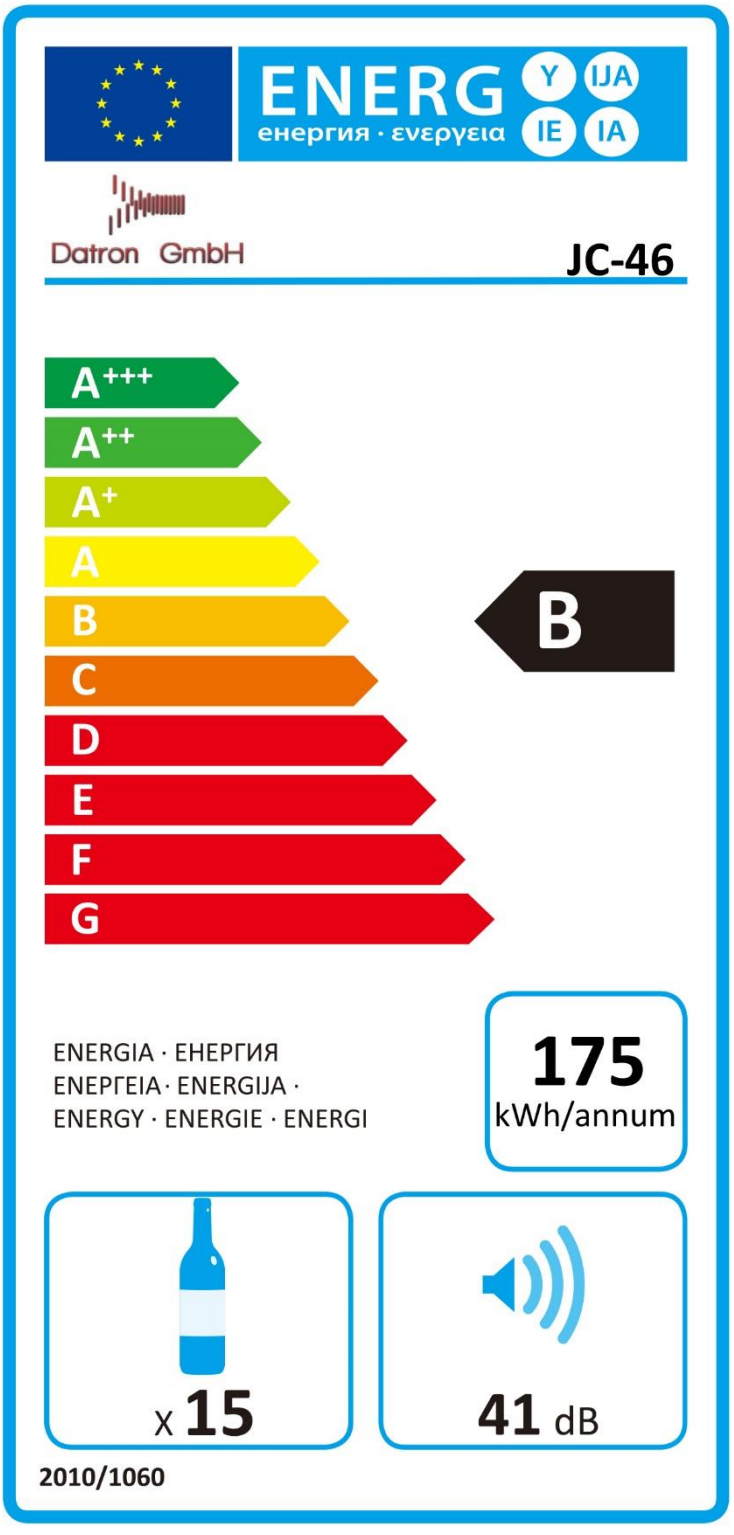
ENERG
Y
IJA
IE
IA
енергия · ενεργεια
Datron GmbH
JC-46
A+++
A++
A+
A
B
C
D
E
F
G
B
ENERGIA · ЕНЕРГИЯ
ΕΝΕΡΓΕΙΑ · ENERGIJA ·
ENERGY · ENERGIE · ENERGI
175
kWh/annum
x 15
41 dB
2010/1060